
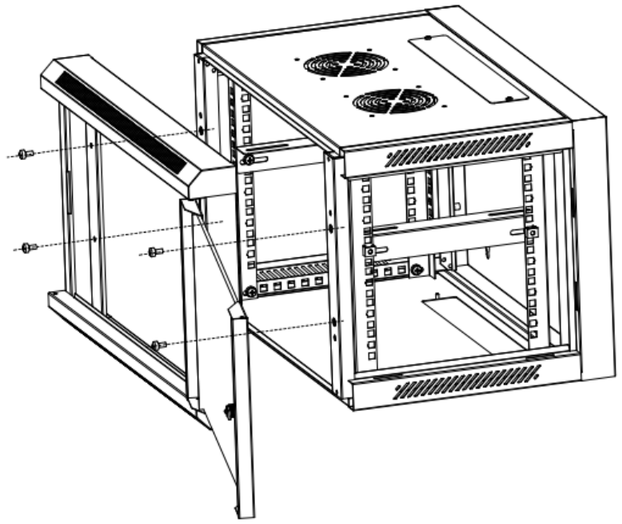



STEP 5
Open the front door,assembly the front frame, and side frames by 4pcs M6*12 screws.

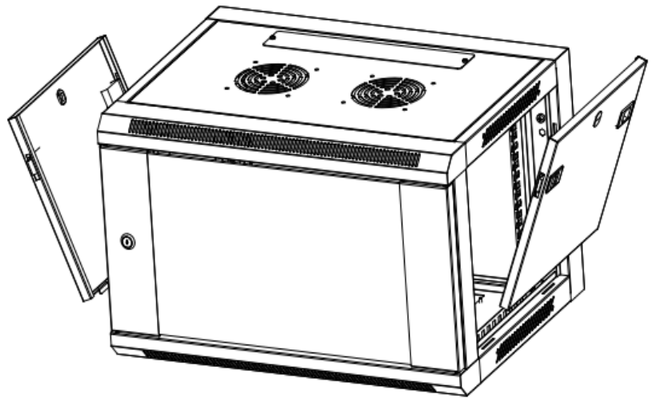

STEP 6
Assembly the side panels

Note:After assembly,please adjust the diagonal size of the cabinet to ensure homogeneous space for all doors and all doors work well.

UPTEC - Coffret 19" en KIT 6U/9U/12U P.450mm - montage rapide

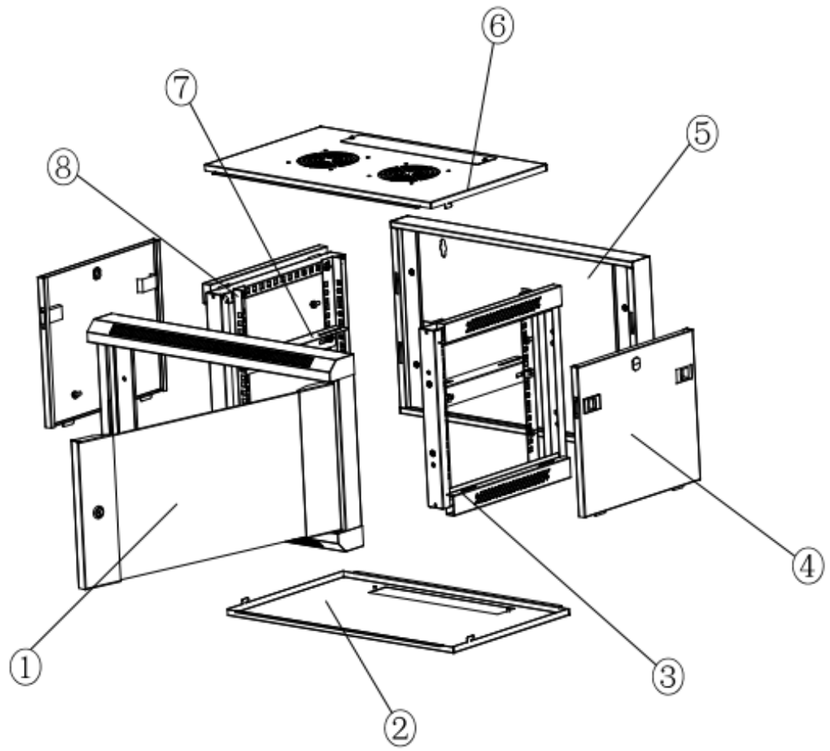

Packaging List

1. Front frame - 1pc
2. Bottom panel - 1pc
3. Side frames - 2pcs
4. Side panel - 2pcs
5. Rear frame - 1pc
6. Top cover - 1pc
7. L type mounting bracket - 2pcs
8. Vertical mounting rail - 4pcs

Item List of Accessaries Packaging


Assembly Hardwares Kits:

- M6*12 screw - 12pcs
- M6 cage nuts - 4pcs
- Key - 2pcs


End User Hardwares Kits:
U Capacity ≤12U, 12 sets cagenuts ; U Capacity >12U, 24 sets cagenuts.
(cagenut : M6*12 screw & M6 cage nut)

Tips: Check the quantities of the items before assembly.


Installation

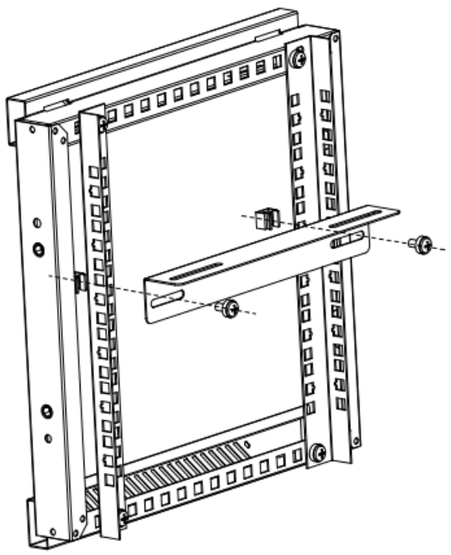


STEP 1
Assembly L type mounting bracket by 4pcs M6*12 screws and M6 cage nuts

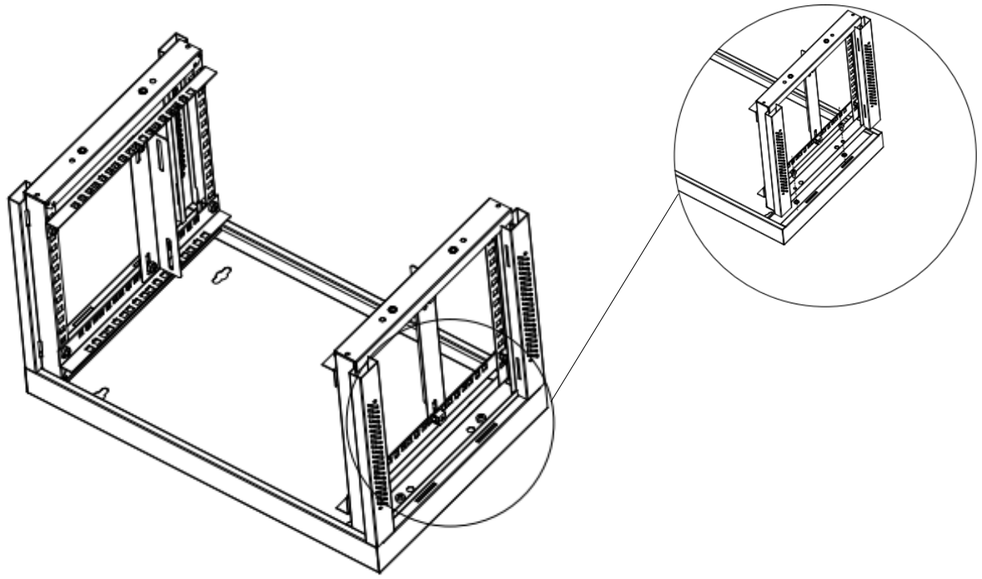

STEP 2
Assembly the side frames, and rear frame by 4pcs M6*12 screws.

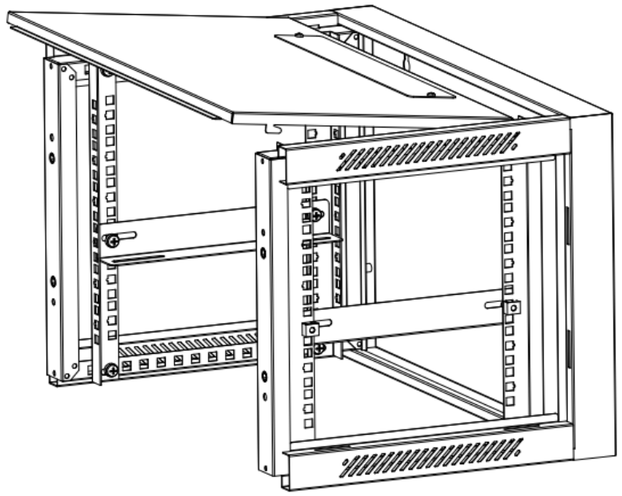

STEP 3
Assembly the top cover

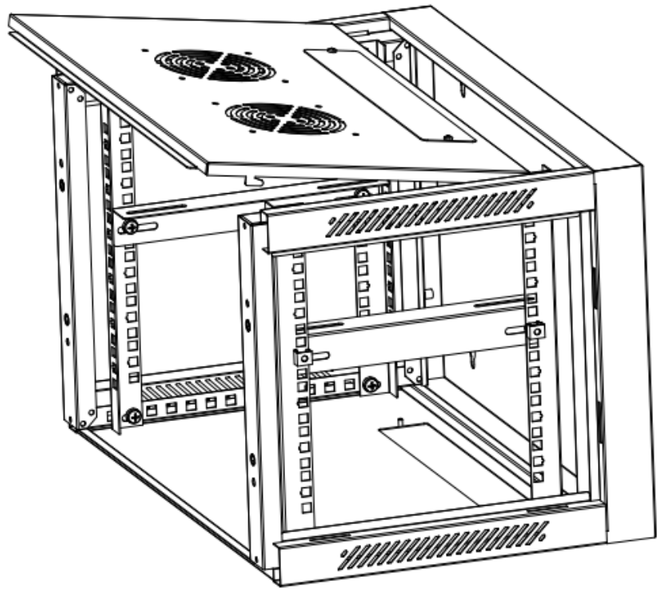

STEP 4
Assembly the bottom panel